


HOME DECORATORS — *collection* —

BF-24922 OXFORD HALL TREE 24Wx70Hx18D"

INV#08293





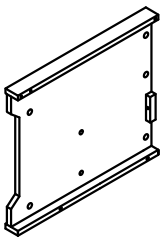
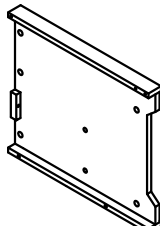
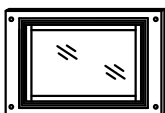
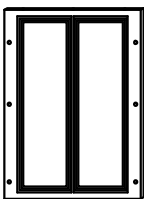
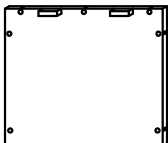


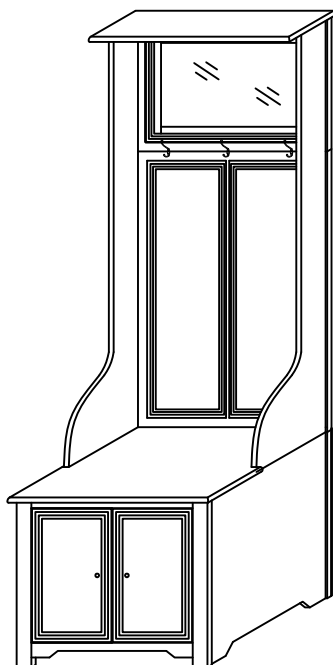
ASSEMBLY INSTRUCTIONS

Made In China

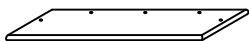


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

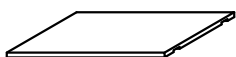
PARTS LIST		
A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C  UP LEFT SIDE PANEL-1PC
D  UP RIGHT SIDE PANEL-1PC	E  DOWN LEFT SIDE PANEL-1PC	F  DOWN RIGHT SIDE PANEL-1PC
G  UP BACK PANEL-1PC	H  MIDDLE BACK PANEL-1PC	I  DOWN BACK PANEL-1PC
J  LARGE TOP PANEL-1PC	K  ADORNING PANEL-1PC	L  SHELF-1PC

M



DOWN ADORNING PANEL-1PC

N



LEFT DOOR-1PC

O




RIGHT DOOR-1PC

P



CAM-LOCKS-22PCS

Q



HINGES-4PCS

R



DOWELS-4PCS

S




SCREWS-26PCS

T



ALLEN WERNCH-1PC

U




SCREWS-15PCS

V



CAM-TOOL-1PC

W



CAM-BOLTS-22PCS

X



SCREWS-7PCS

Y



LARGE MAGNET-1PC

Z




POTHOOKS-3PCS

A1




SHELF SUPPORTS-4PCS

B1

FEMALE
MAGNETS-2PCS

C1




SCREWS-6PCS

D1



KNOBS-2PCS



E1

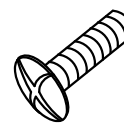

SCREWS-2PCS




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

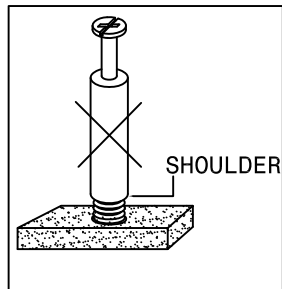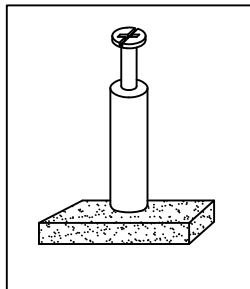


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

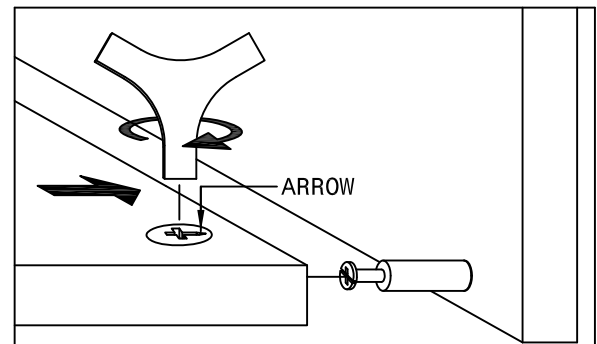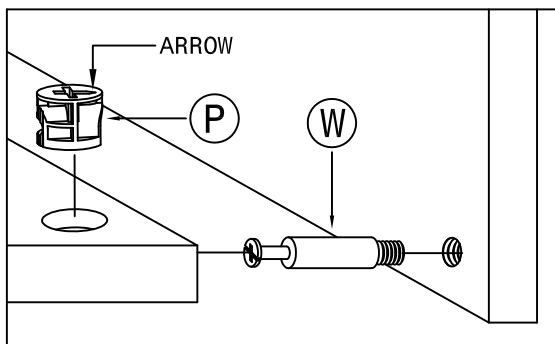


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

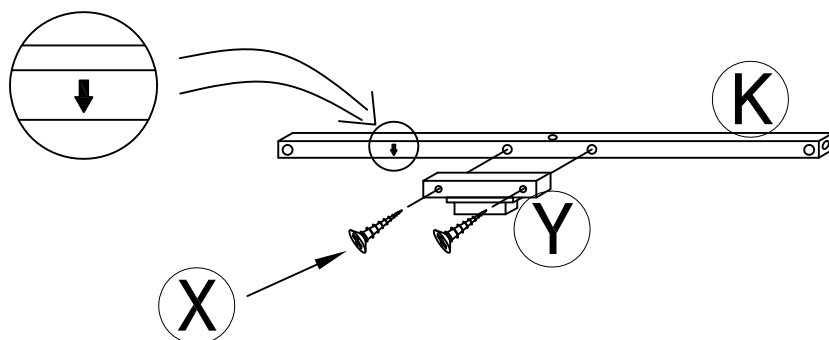


1) . ASSEMBLE THE LARGE MAGNET(Y) .

- ATTACH THE LARGE MAGNET(Y) TO ADORNING PANEL(K) USING 2 SCREWS(X) .

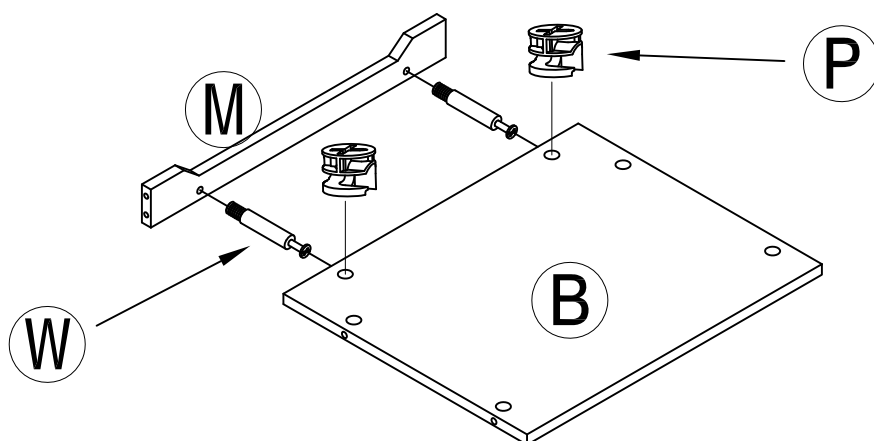


2) . ASSEMBLE THE DOWN ADORNING PANEL(M) .

- ROTATE THE 2 CAM-BOLTS(W) INTO THE HOLES IN THE DOWN ADORNING PANEL(M) .
- PLACE CAM-BOLTS(W) INTO HOLES IN BOTTOM PANEL(B) AND ATTACH USING 2 CAM-LOCKS(P) .

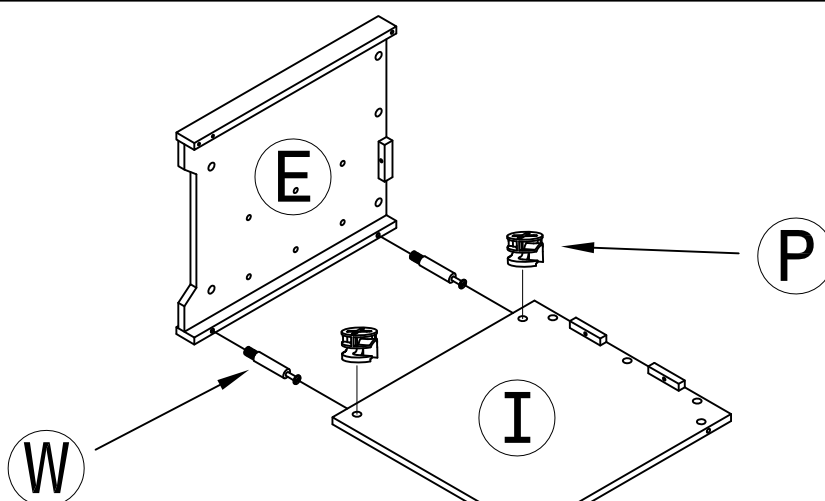


3) . ASSEMBLE THE DOWN LEFT SIDE PANEL(E) .

- ROTATE THE 2 CAM-BOLTS(W) INTO THE HOLES IN THE DOWN LEFT SIDE PANEL(E) .
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE DOWN BACK PANEL(I) AND ATTACH USING 2 CAM-LOCKS(P) .

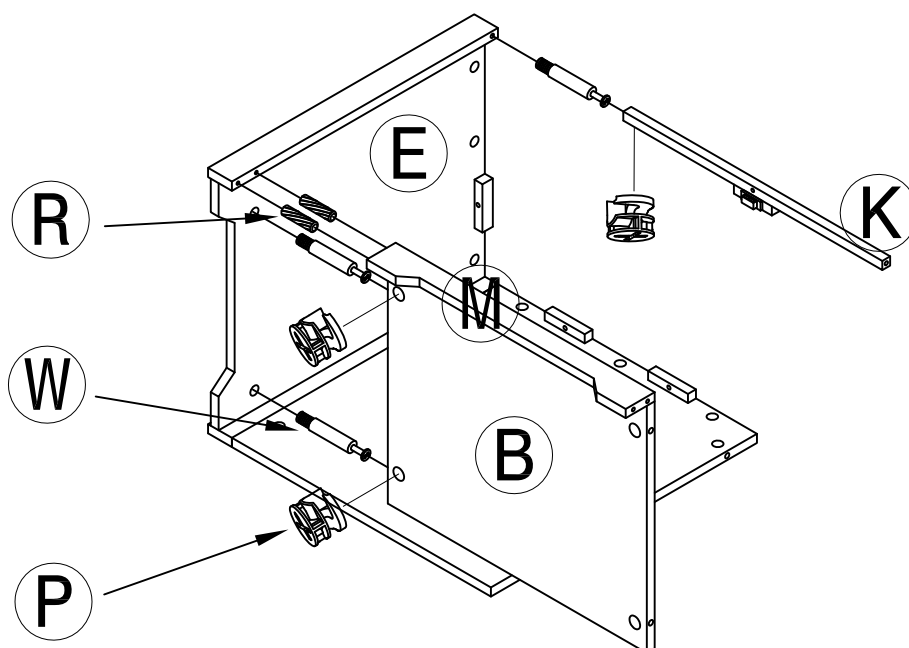


4) . ASSEMBLE THE PANELS(B/K) .

- ROTATE THE 3 CAM-BOLTS(W) AND INSERT 2 DOWELS(R) INTO THE HOLES IN THE DOWN LEFT SIDE PANEL(E) .
- PLACE THE CAM-BOLTS(W) INTO THE HOLES IN THE PANELS(B/K) AND ATTACH USING 3 CAM-LOCKS(P) .

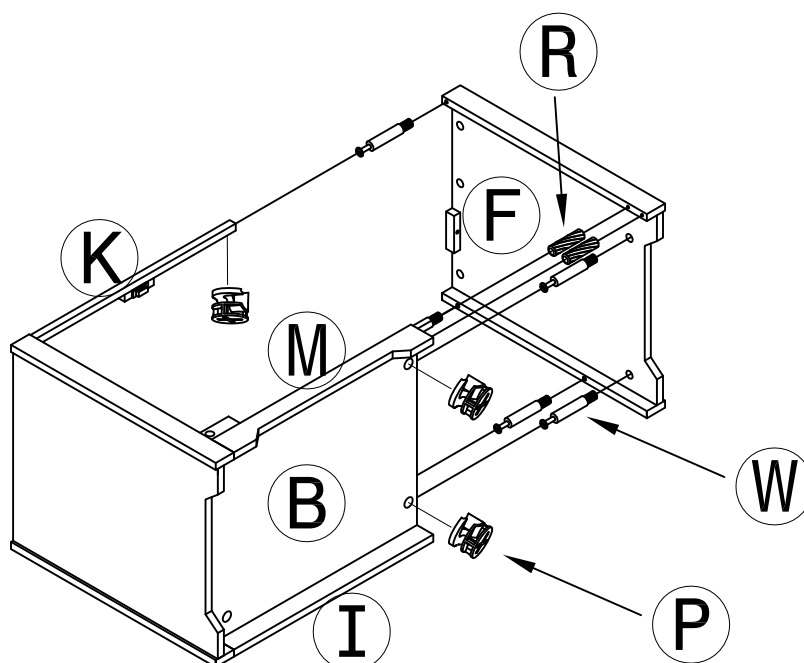


5) . ASSEMBLE THE DOWN RIGHT SIDE PANEL(F) .

- ROTATE THE 5 CAM-BOLTS(W) AND INSERT 2 DOWELS(R) INTO THE HOLES IN THE DOWN RIGHT SIDE PANEL(F) .
- PLACE THE CAM-BOLTS(W) INTO THE HOLES IN THE PANELS(B/I/M/K) AND ATTACH USING 5 CAM-LOCKS(P) .

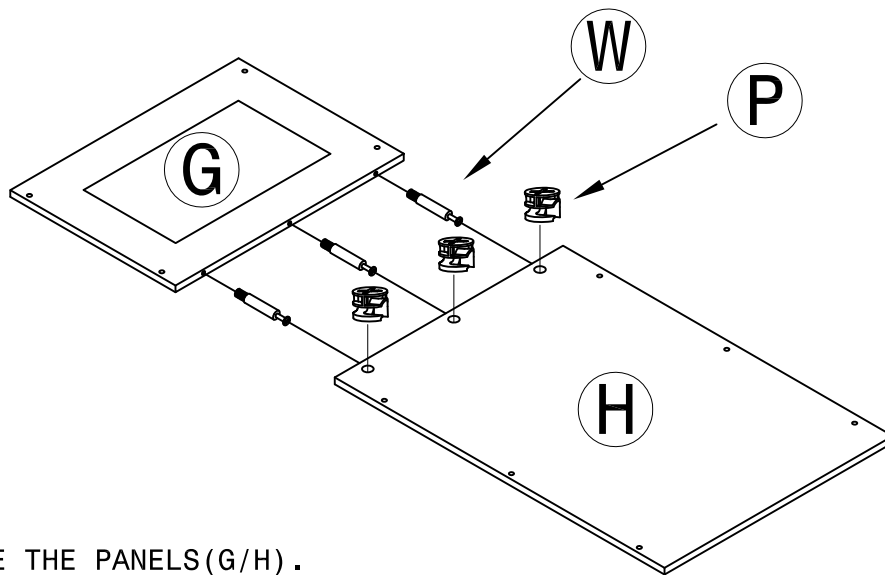


6) . ASSEMBLE THE PANELS(G/H) .

- ROTATE THE 3 CAM-BOLTS(W) INTO THE HOLES IN THE UP BACK PANEL(G) .
- PLACE THE CAM-BOLTS(W) INTO THE HOLES IN THE PANEL(H) AND ATTACH USING 3 CAM-LOCKS(P) .

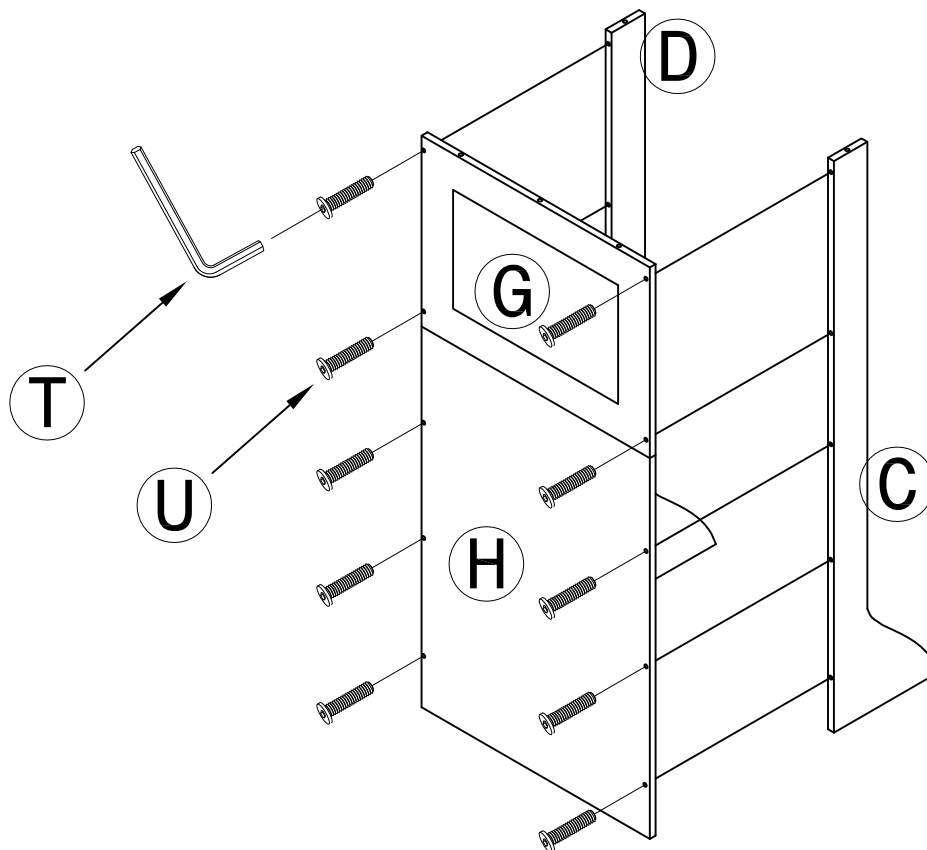


7) . ASSEMBLE THE PANEL(C/D) .

- ATTACH THE PANELS(C/D) TO PANELS(G/H) USING 10 SCREWS(U) .

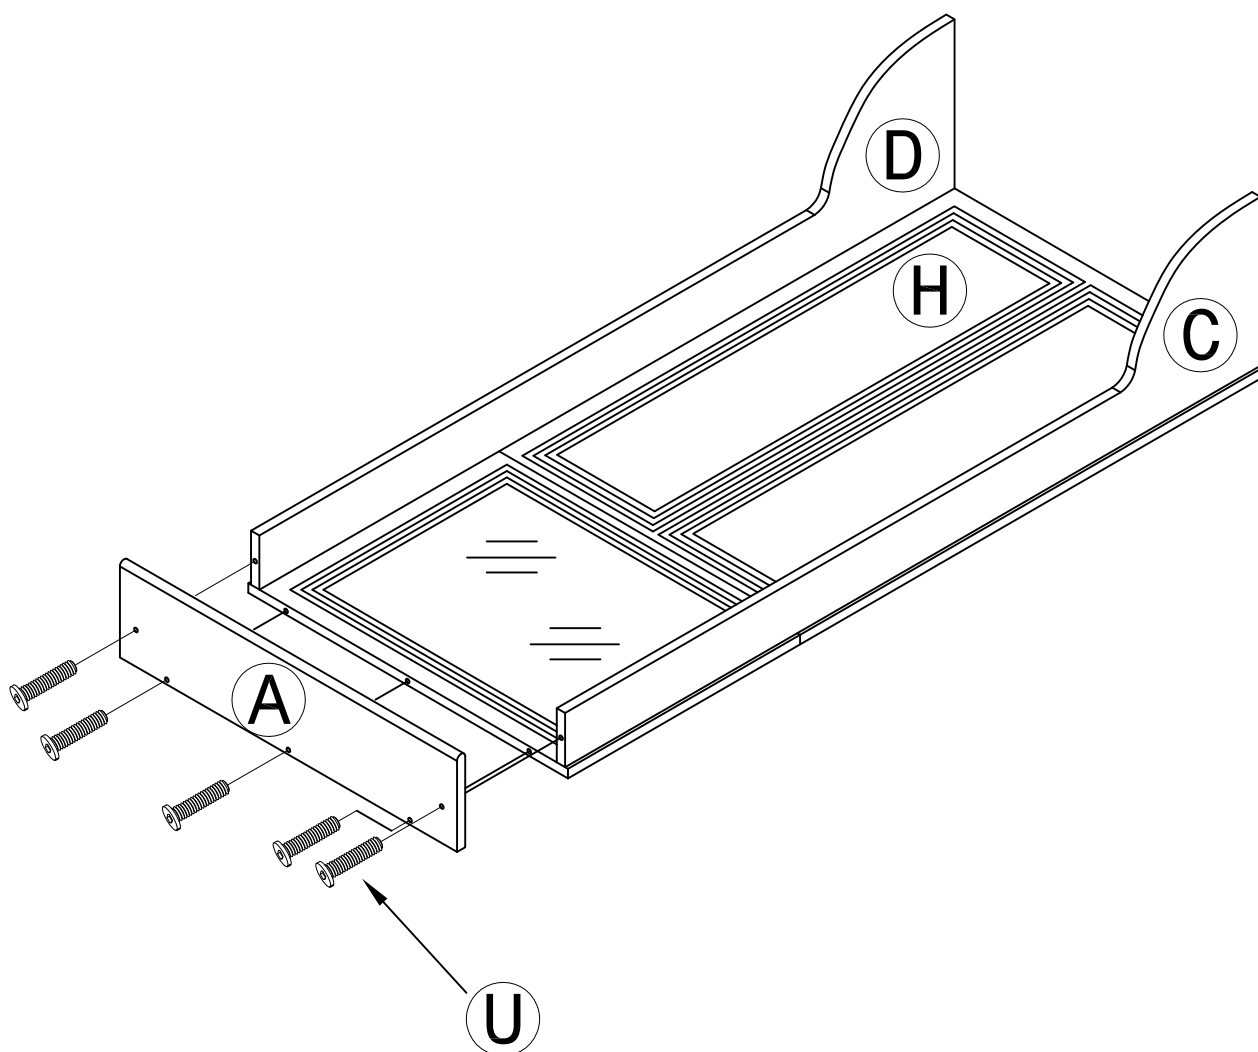


8) . ASSEMBLE THE TOP PANEL (A) .

- ATTACH THE TOP PANEL (A) TO PANEL (C/D/H) USING 5 SCREWS (U) .

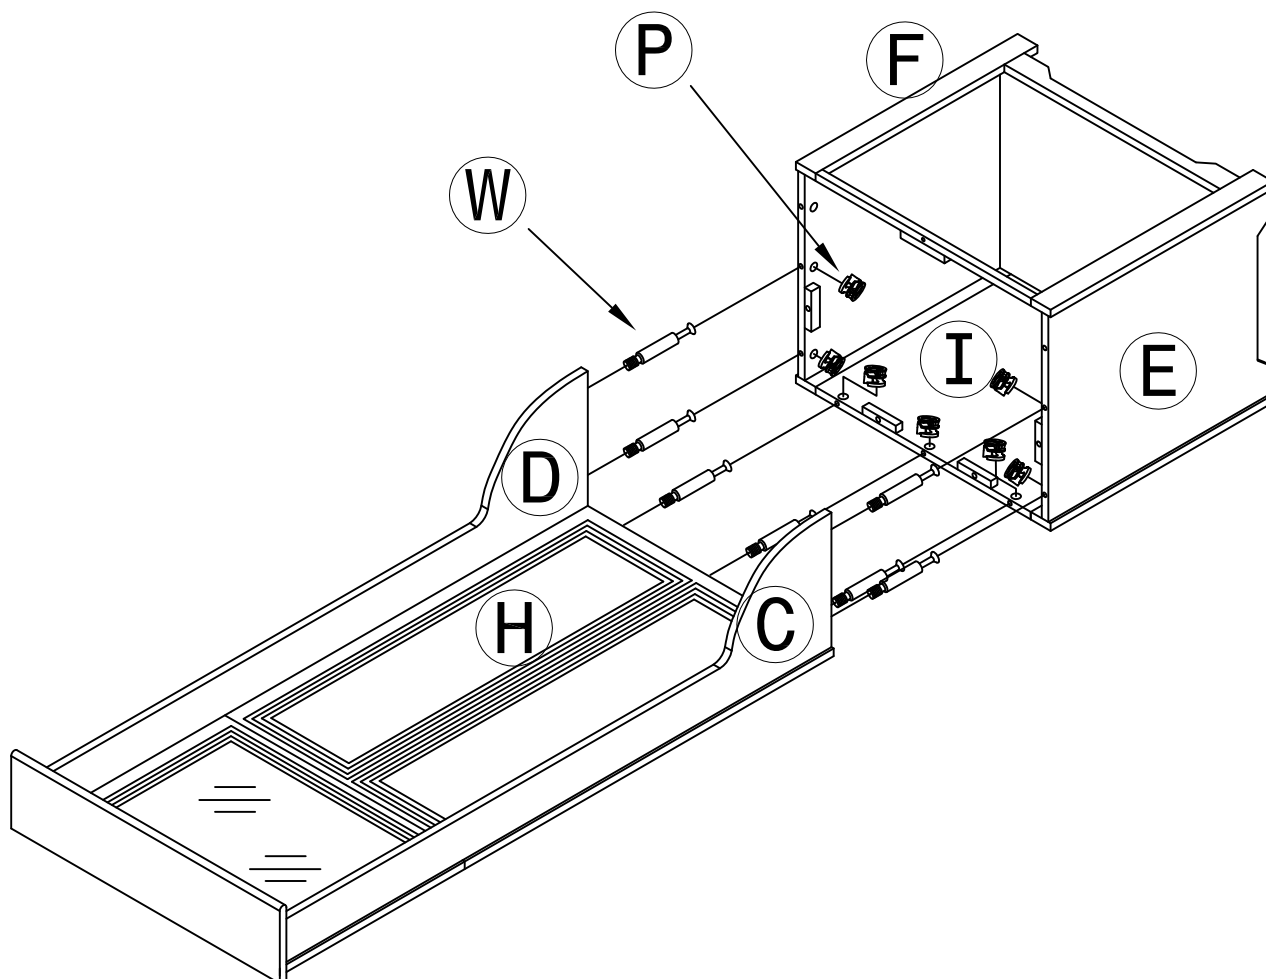


9) . ASSEMBLE THE PANELS(C/D/H).

- ROTATE THE 7 CAM-BOLTS(W) INTO THE HOLES IN THE PANELS(C/D/H) .
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE PANELS(E/F/I) AND ATTACH USING 7 CAM-LOCKS(P) .

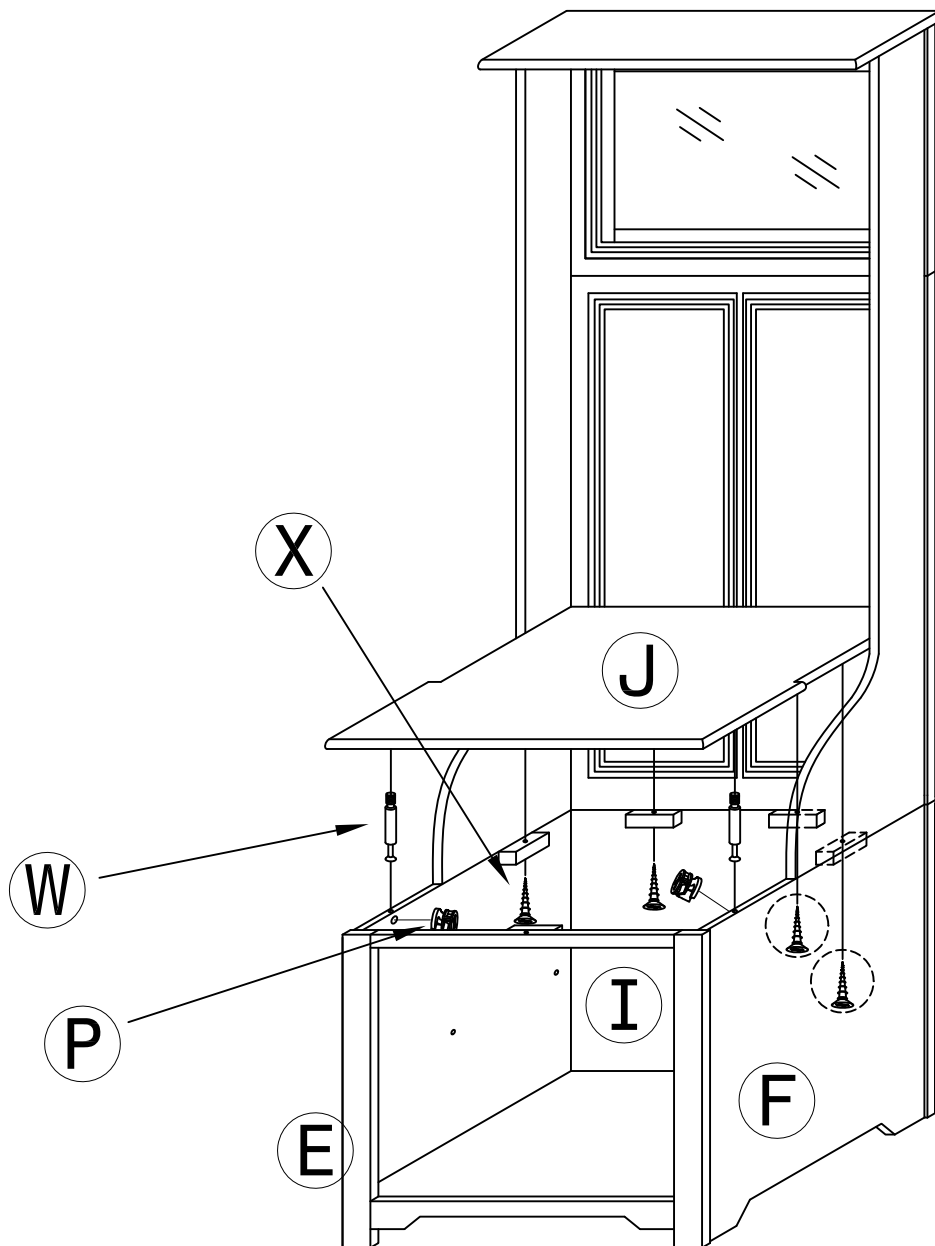


10) . ASSEMBLE THE LARGE TOP PANEL(J) .

- ROTATE THE 2 CAM-BOLTS(W) INTO THE HOLES IN THE LARGE TOP PANEL(J) .
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE PANELS(E/F) AND ATTACH USING 2 CAM-LOCKS(P) .
- ROTATE THE 4 SCREWS(X) INTO THE HOLES IN THE PANELS(E/F/I) .

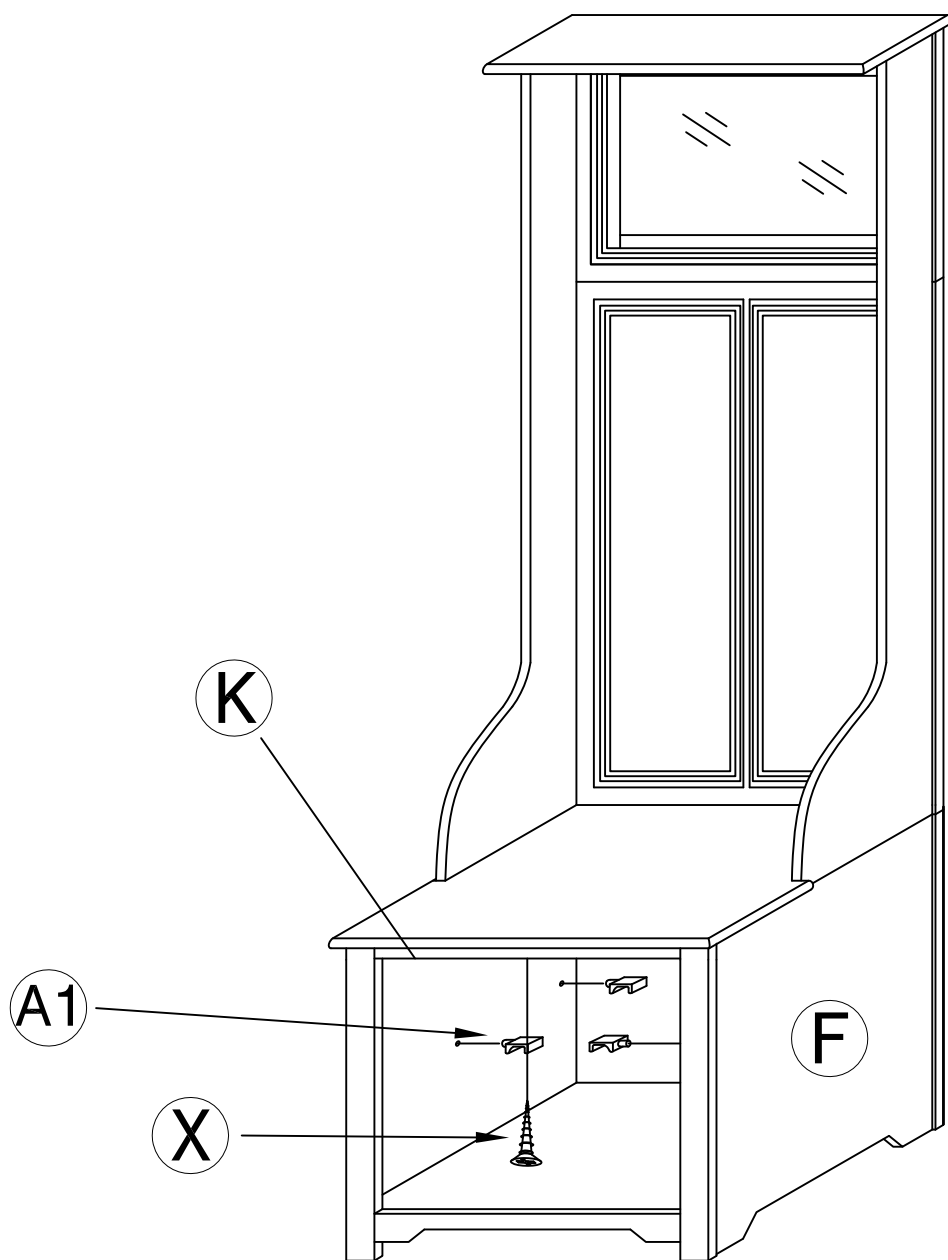


11) . ASSEMBLE THE ADORNING PANEL(K) AND SHELF SUPPORTS(A1) .

- INSERT 4 SHELF SUPPORTS(A1) INTO THE HOLES IN THE PANELS(E/F) .
- ROTATE THE ONE SCREW(X) INTO THE HOLE IN THE ADORNING PANEL(K) .

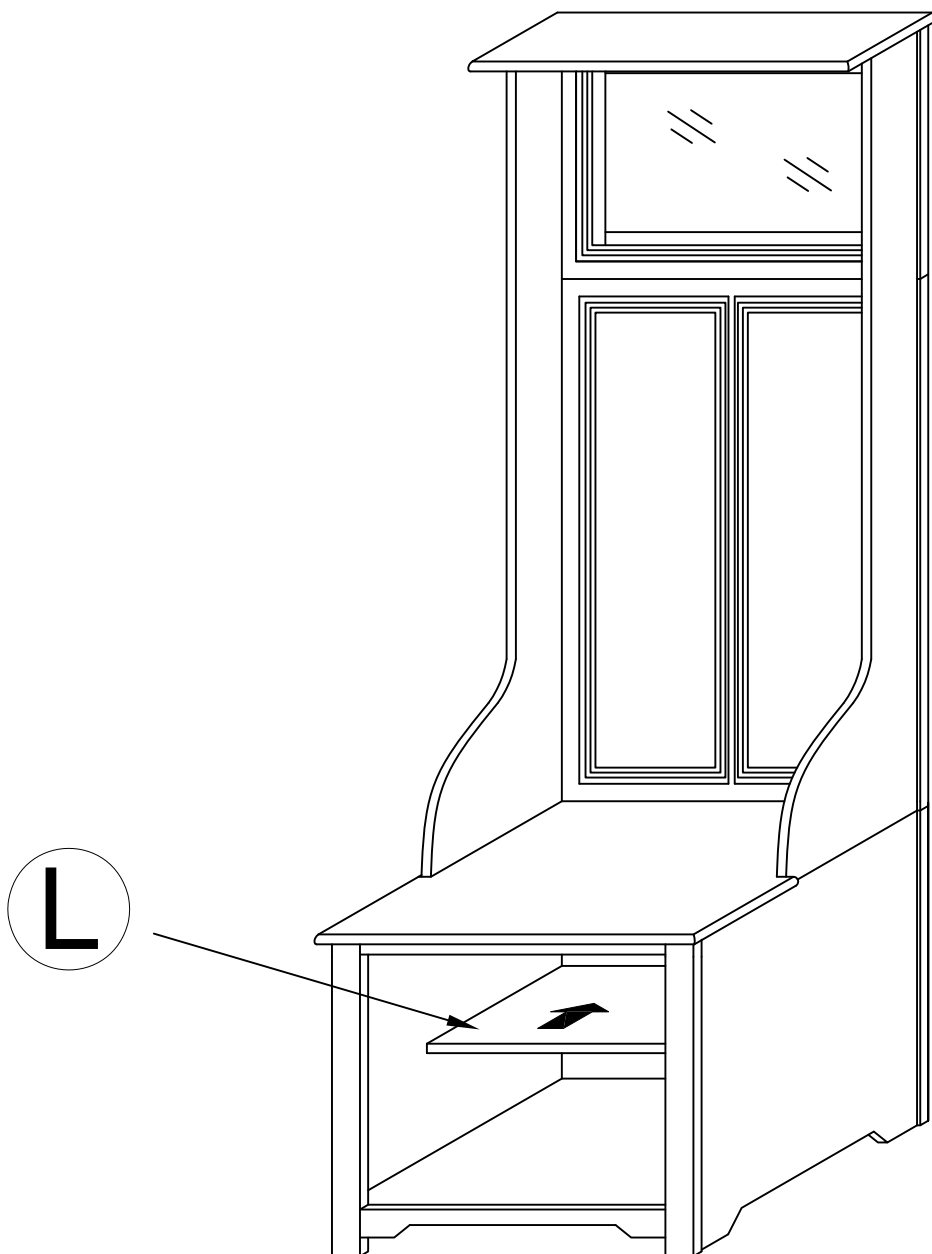


12) . ASSEMBLE THE SHELF PANEL(L) .

- PLACE THE SHELF(L) ONTO THE SHELF SUPPORTS(A1) .

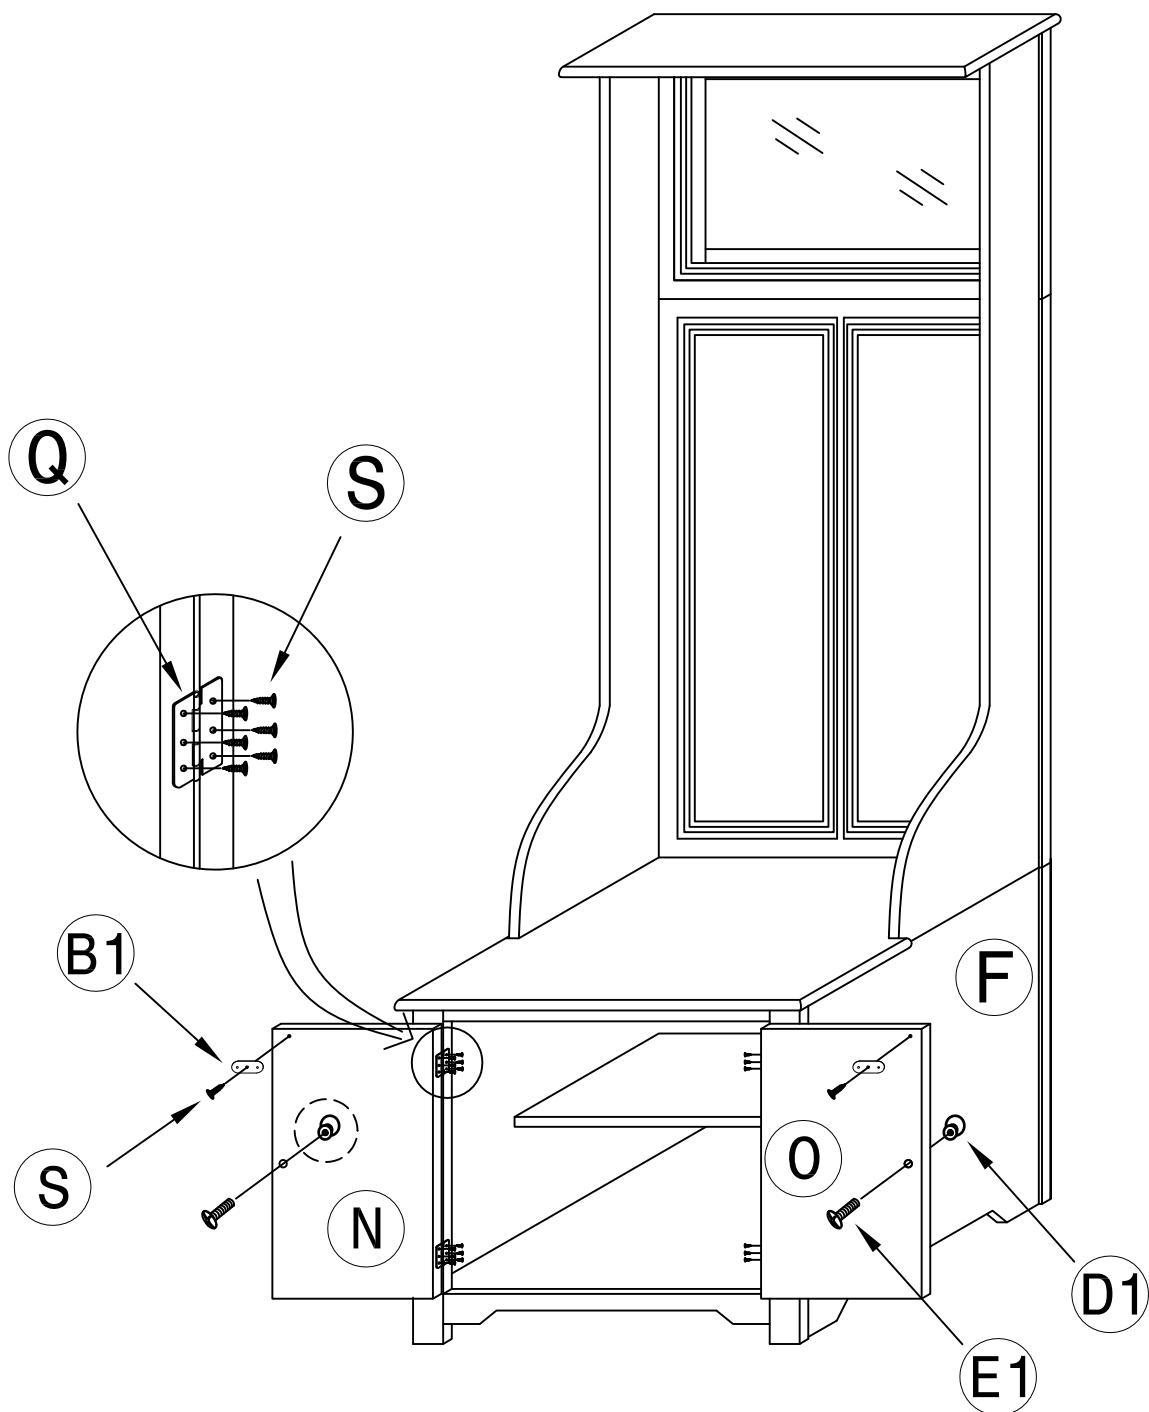

13) . ASSEMBLE THE DOORS(N/O) .

- ATTACH 2 KNOBS(D1) TO DOORS(N/O) USING 2 SCREWS(E1) .
- ATTACH 2 FEMALE MAGNETS(B1) TO DOORS(N/O) USING 2 SCREWS(S) .
- ATTACH 4 HINGES(Q) TO DOORS(N/O) AND STAND PANELS(E/F) USING 24 SCREWS(S) .

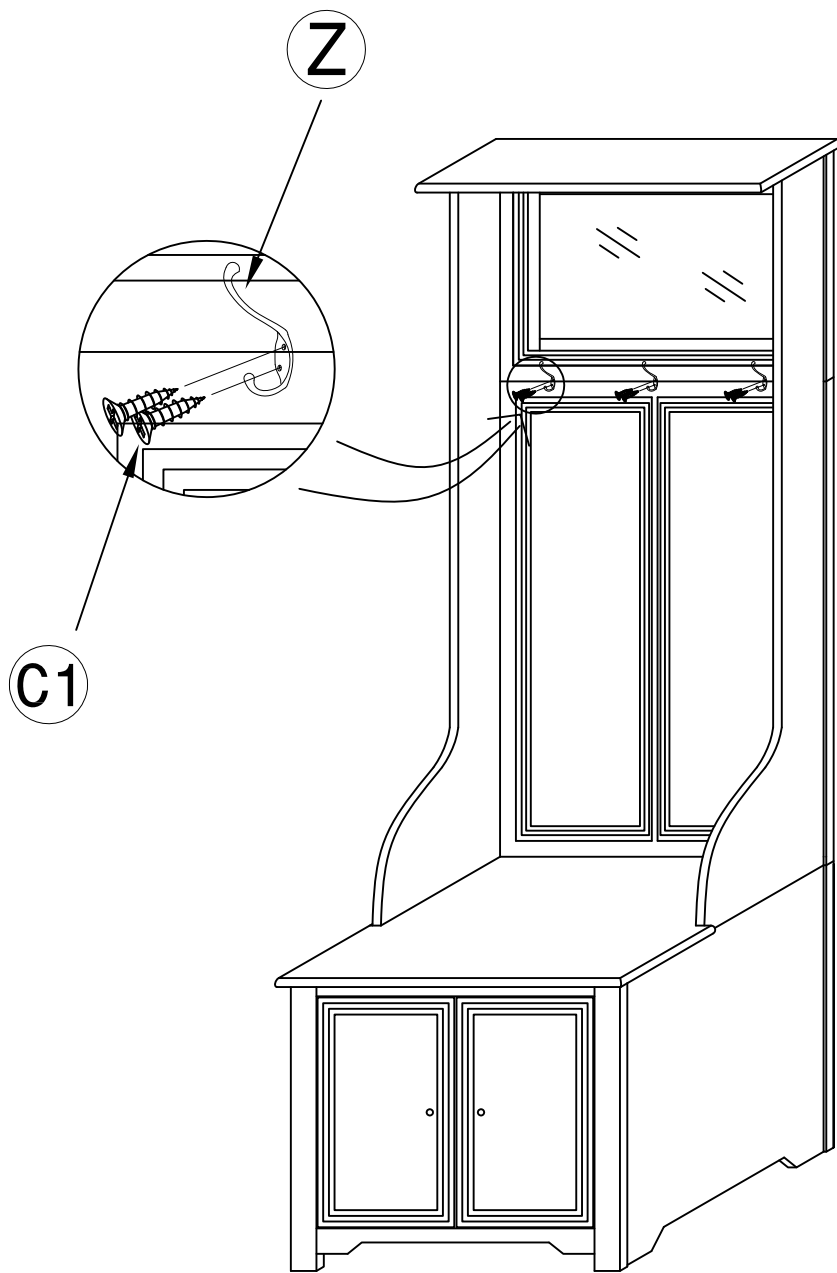

14) . ASSEMBLE THE POTHOOKS(Z) .

- ATTACH 3 POTHOOKS(Z) TO PANELS(G/H) USING 6 SCREWS(C1) .